



# Sony SRS-BTX500 Battery Replacement

This guide will provide a step-by-step process for replacing the lithium battery inside the Sony SRS-BTX500.

Written By: Fadi Mohamed



## INTRODUCTION

This guide will teach you how to remove the screws and panel that cover the battery. It will also teach you how to remove the battery from the device.

---



### TOOLS:

 
- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Locate the four rubber grips on the bottom of the speaker. Use the plastic opening tool to remove the grips, exposing the underlying screws.

## Step 2

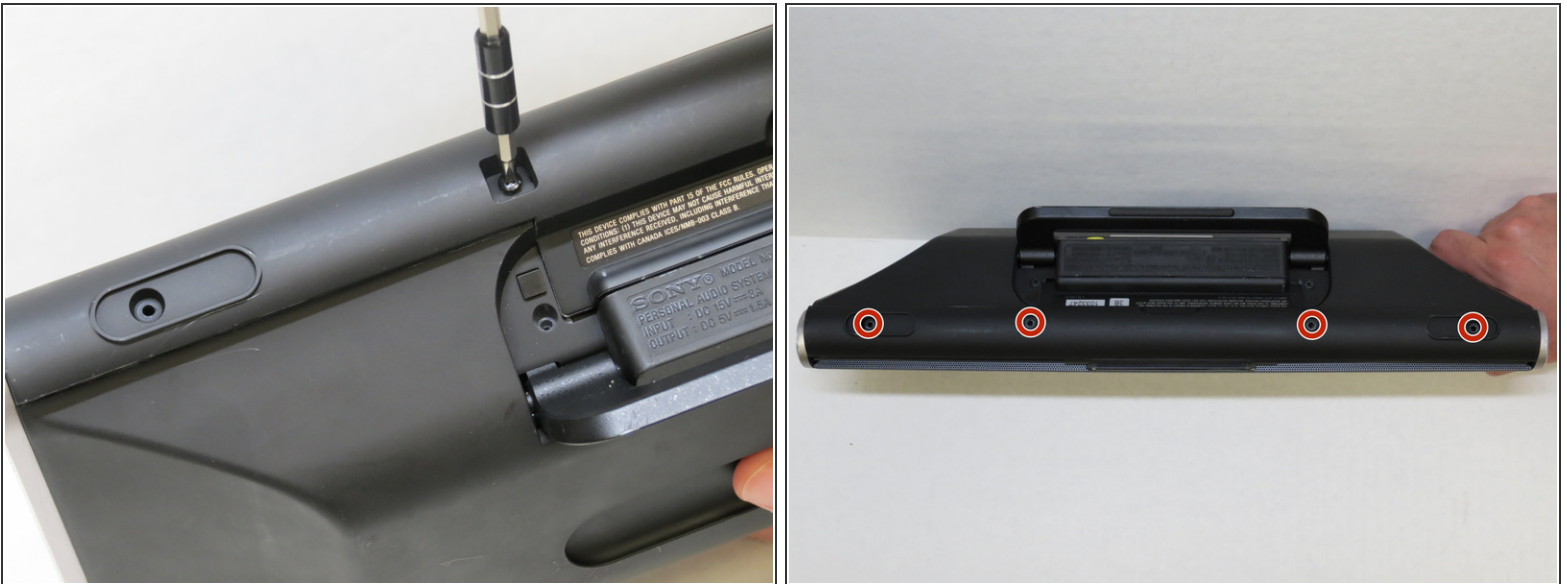

- Using a Phillips #1 screwdriver, remove the four 5mm screws that were underneath the four rubber grips.




## Step 3



 - Use the plastic opening tool to run along the outside edges of the speaker. Pry along the seams until you can remove the side panel of the speaker, exposing the battery.

## Step 4

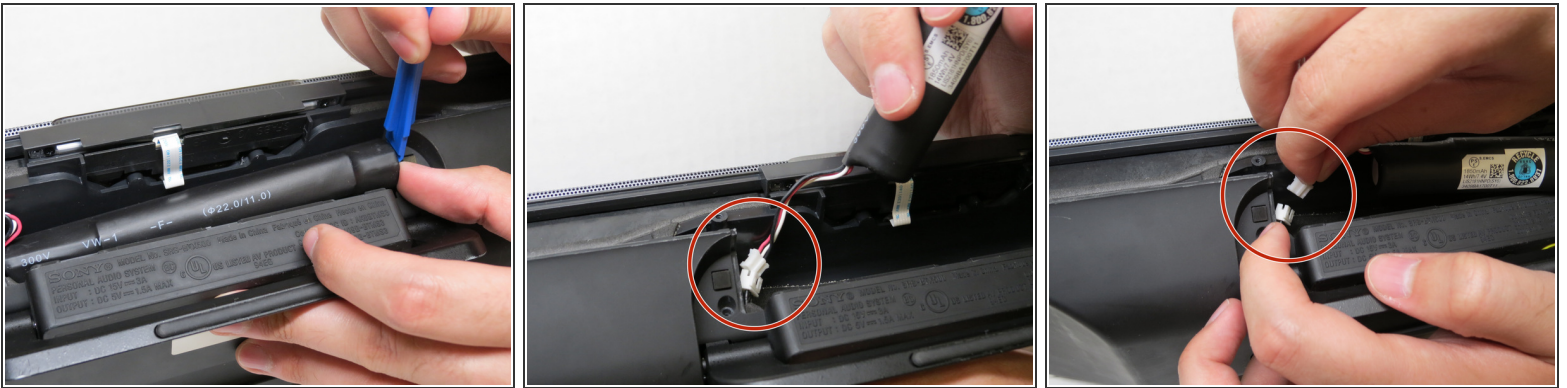

- Use the plastic opening tool to remove the battery from casing.
- Unclip the battery from the speaker. Remove and replace.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 04:08:21 AM.